

### Kaiser 35mm Film Retriever - # 204132

**Avoid direct exposure to the sun or bright light when using the film retriever.**

1. Turn the spindle (1) of the film cartridge three or four times counter-clockwise.
2. Push the button (5) into position A.
3. Inset the tongue (3) completely into the film cartridge slot (2). The tip of the second tongue (4) must also disappear in the cartridge slot.
4. Turn the film cartridge spindle (1) slowly counter-clockwise until you hear a quiet "click".
5. Push the button (5) into position B, while holding the film cartridge and the spindle (1) firmly (see fig. II).
6. Turn the film cartridge spindle (1) about one turn clockwise until you feel slight resistance.
7. Pull the complete film retriever out of the cartridge, making sure that you are not holding the cartridge by the spindle (1).
8. Repeat the complete operation if the start of the film strips has not been extracted from the cartridge.

